

# Ethisis license levels version 10.0.0.1

## Ethisis Server

License level	<i>Free</i>	<i>Basic</i>	<i>Extended</i>	<i>Advanced</i>	<i>Premium</i>
Number of cameras <sup>1</sup>	4	1-20	1-40	1-64	1-250
Max storage capacity	Unlimited	Unlimited	Unlimited	Unlimited	Unlimited
Max storage time	Unlimited	Unlimited	Unlimited	Unlimited	Unlimited
Number of concurrent clients connected to server (the sum of clients, ActiveX, Ethisis Mobile & WideQuick) <sup>1</sup>	2	3	5	20	Unlimited
Support for megapixel cameras	•	•	•	•	•
Schedules	•	•	•	•	•
Recording on event	•	•	•	•	•
Continous recording	•	•	•	•	•
Motion detection	•	•	•	•	•
Centralized administration	•	•	•	•	•
Browsing for cameras on the network	•	•	•	•	•
Script engine	•	•	•	•	•
E-mail/SMS	•	•	•	•	•
Data logging	•	•	•	•	•
PTZ	•	•	•	•	•
Camera groups	•	•	•	•	•
Connect I/O devices via plug-in (1 device / camera license)	•	•	•	•	Unlimited
Connect Ethisis Mobile – Light mode	•	•	•	•	•
Connect Ethisis Mobile – Full mode	-	•	•	•	•
OPC-client	-	-	•	•	•
Signing of exported jpg images	-	-	•	•	•
Dual streams from cameras	-	-	•	•	•
Door controllers (1 door / camera license)	-	-	•	•	•
Number of I/O signals via external OPC-server	-	-	32	128	Unlimited
Number of preset positions/camera	-	-	Unlimited	Unlimited	Unlimited
Number of guarded tours/camera	-	-	Unlimited	Unlimited	Unlimited
TCP/http listeners	-	-	Unlimited	Unlimited	Unlimited
Connect Ethisis Server OPC-server	-	-	Option	Option	•
Connect ActiveX client	-	-	Option	Option	•
Connect WideQuick EthisisView	-	-	-	Option	•
Multiple storage devices	-	-	-	•	•
Authorization	-	-	-	•	•
Possibility of pre authorization	-	-	-	•	•
Ethisis native users and user groups	-	-	-	•	•
Audit trail	-	-	-	•	•
Remote control of Ethisis Client via script	-	-	-	•	•
Dewarping of 360-cameras in Admin/Client	-	-	-	•	•
Support for GigE cameras	-	-	-	-	•
Floating camera licenses	-	-	-	-	•
Encryption of video and data storage	-	-	-	-	•
Support for cluster and redundancy	-	-	-	-	•
Support for database connections	-	-	-	-	•
Support for alarm central functions	-	-	-	-	•

<sup>1</sup> The current hardware of the server/network may limit the actual number of cameras/clients that can be connected. It is up to the integrator to ascertain that the offered hardware can handle the proposed plant.

# Ethisis license levels version 10.0.0.1

## Ethisis Client<sup>2</sup>

Connected server's license level	<b>Free</b>	<b>Basic - Premium</b>
Number of servers a client can connect to	1	Unlimited
Number of camera views/client view <sup>3</sup>	64	64
Number of sections	Unlimited	Unlimited
Support for megapixel cameras	•	•
Hotspot	•	•
Automatic camera switching	•	•
Support for maps and pictures in camera views	•	•
Export of recorded video	•	•
Motion search in recorded video	•	•
Digital zooming	•	•
Remote control of client from external system via COM	•	•
Client view activation via I/O	•	•
PTZ	•	•
Support for joystick	•	•
Event triggered playback of sound files	•	•
Authorization <sup>4</sup>	•	•
Audit trail <sup>4</sup>	•	•
Support for multiple monitors	•	•
Interaction objects in camera views	•	•
No license required	•	•
Wide screen support (flexible client views)	•	•
Event list	•	•
Alarm list	•	•
Pre authorization <sup>4</sup>	•	•
Instant replay <sup>5</sup>	•	•
Dewarping of 360-cameras <sup>45</sup>	-	•
Connect to cluster	-	•

<sup>2</sup> Ethisis Client is free of charge and exists only in one version. Availability of functions can depend on license level of Ethisis Server.

<sup>3</sup> The current hardware of the computer/network may limit the actual number of cameras that can be displayed. It is up to the integrator to ascertain that the offered hardware can handle the intended function.

<sup>4</sup> Availability of function depends on current license level of Ethisis Server.

<sup>5</sup> Function is only available in the 64-bit version of Ethisis Client.