

# Ethisis license levels version 14.2.0.1

## Ethisis Server

License level	<i>Free</i>	<i>Basic</i>	<i>Extended</i>	<i>Advanced</i>	<i>Premium</i>	<i>Universal – Function level</i>	1	2	3	4	5	6
Number of cameras <sup>1</sup>	4	1-20	1-40	1-64	1-250	1 – Unlimit.	1	2	3	4	5	6
Max storage capacity	Unlimit.	Unlimit.	Unlimit.	Unlimit.	Unlimit.	Unlimit.						
Max storage time for video	1 day	Unlimit.	Unlimit.	Unlimit.	Unlimit.	Unlimit.						
Number of concur. clients conn. to server (the sum of clients, ActX, Ethisis Mobile & WQ) <sup>1</sup>	2	3	5	20	Unlimit.	Unlimit.						
Requires Internet connection	Yes	No	No	No	No	Yes						
Updates free-of-charge	-	Option	Option	Option	Option	Included						
Schedules	•	•	•	•	•	•						
Recording on event and continuous recording	•	•	•	•	•	•						
Motion detection	•	•	•	•	•	•						
Centralized administration	•	•	•	•	•	•						
Browsing for cameras on the network <sup>2</sup>	•	•	•	•	•	•						
Script engine	•	•	•	•	•	•						
Data logging	•	•	•	•	•	•						
PTZ	•	•	•	•	•	•						
Camera groups	•	•	•	•	•	•						
Virtual cameras	•	•	•	•	•	•						
Support for EAS (Ethisis Access Service)	•	•	•	•	•	•						
I/O devices (1 device / camera license)	•	•	•	•	•	•						
Connect Ethisis Mobile – Light mode	•	•	•	•	•	•						
Connect Ethisis Mobile – Full mode	-	•	•	•	•	•						
E-mail/SMS	-	•	•	•	•	•						
Signing of exported jpg images	-	-	•	•	•	•	2					
OPC-client	-	-	•	•	•	•						
Number of I/O signals via external OPC-server	-	-	32	128	Unlimit.	Unlimit.						
Number of preset positions/camera	-	-	Unlimit.	Unlimit.	Unlimit.	Unlimit.						
Number of guarded tours/camera	-	-	Unlimit.	Unlimit.	Unlimit.	Unlimit.						
TCP/http listeners	-	-	Unlimit.	Unlimit.	Unlimit.	Unlimit.						
Connect Ethisis Server OPC-server	-	-	Option	Option	•	Option <sup>3</sup>						
Connect ActiveX client	-	-	Option	Option	•	Option <sup>3</sup>						
Audio out to audio devices (1 device / camera license)	-	-	•	•	•	•	3					
Audio out to cameras	-	-	•	•	•	•						
Logical cameras <sup>4</sup>	-	-	•	•	•	•						
Door controllers (1 door / camera license)	-	-	•	•	•	•						
Create views in client	-	-	•	•	•	•						

<sup>1</sup> The current hardware of the server/network may limit the actual number of cameras/clients that can be connected. It is up to the integrator to ascertain that the offered hardware can handle the proposed plant.

<sup>2</sup> Does not work in routed networks.

<sup>3</sup> This option is included free-of-charge in Universal level 6.

<sup>4</sup> Maximum total number of logical cameras is 2 x the number of available camera licenses.

# Ethisis license levels version 14.2.0.1

## Ethisis Server

License level	<i>Free</i>	<i>Basic</i>	<i>Extended</i>	<i>Advanced</i>	<i>Premium</i>	<i>Universal - Level</i>			
Connect WideQuick EthisisView	-	-	-	Option	•	Option <sup>5</sup>	4	5	6
Multiple storage devices	-	-	-	•	•	•			
Authorization	-	-	-	•	•	•			
Possibility of pre authorization	-	-	-	•	•	•			
Ethisis native users and user groups	-	-	-	•	•	•			
Audit trail	-	-	-	•	•	•			
Remote control of Ethisis Client via script	-	-	-	•	•	•			
Script libraries	-	-	-	•	•	•			
Dewarping of 360-cameras in Admin/Client	-	-	-	•	•	•	5		
Support for UPS	-	-	-	•	•	•			
Hardware acceleration	-	-	-	•	•	•			
Audio in from cameras	-	-	-	•	•	•			
Recording of audio from cameras	-	-	-	•	•	•			
Mini Player	-	-	-	•	•	•			
Adaptive video streams	-	-	-	•	•	•			
Support for GigE cameras <sup>6</sup>	-	-	-	-	•	•	6		
Floating camera licenses	-	-	-	-	•	-			
Encryption of video and data storage	-	-	-	-	•	•			
Support for cluster and redundancy	-	-	-	-	•	•			
Support for database connections	-	-	-	-	•	•			
Support for alarm central functions	-	-	-	-	•	•			
Single Sign On (SSO)	-	-	-	-	•	•			
SNMP reader	-	-	-	-	•	•			
Alarm operator functions	-	-	-	-	Option	Option			
.Net script plugins	-	-	-	-	Option	Option			
Export of video via script	-	-	-	-	Option	Option			
Ethisis SDK	-	-	-	-	Option	Option			
Multi instance of Ethisis Server <sup>78</sup>	-	-	-	-	-	•	1-6		

<sup>5</sup> This option is included free-of-charge in Universal level 6.

<sup>6</sup> Does not work in routed networks.

<sup>7</sup> For security reasons the configuration possibilities are limited when running Ethisis Admin remotely to a system with multiple instances of Ethisis Server. A local Ethisis Admin has full access. See separate document for more information.

<sup>8</sup> Multiple instances require a Universal license. Each instance sets the functional level individually.

# Ethisis license levels version 14.2.0.1

## Ethisis Client<sup>9</sup>

Connected server's license level	<i>Free</i>	<i>Basic - Universal</i>
Number of servers a client can connect to	1	Unlimited.
Number of camera views/client view <sup>10</sup>	64	64
Number of sections	Unlimited	Unlimited
Support for megapixel cameras	•	•
Hotspot	•	•
Automatic camera switching	•	•
Support for maps and pictures in camera views	•	•
Export of recorded video	•	•
Motion search in recorded video	•	•
Digital zooming	•	•
Remote control of client from external system via COM	•	•
Client view activation via I/O	•	•
PTZ	•	•
Support for joystick	•	•
Event triggered playback of sound files	•	•
Authorization <sup>11</sup>	•	•
Audit trail <sup>11</sup>	•	•
Support for multiple monitors	•	•
Interaction objects in camera views	•	•
No license required	•	•
Wide screen support (flexible client views)	•	•
Event list	•	•
Alarm list	•	•
Pre authorization <sup>11</sup>	•	•
Instant replay	•	•
Virtual cameras	•	•
Dewarp of 360-cameras <sup>11</sup>	-	•
Connect to cluster	-	•
Hardware acceleration <sup>11</sup>	-	•
Mini Player <sup>11</sup>	-	•

## Ethisis Mobile<sup>9</sup>

Connected server's license level	<i>Free</i>	<i>Basic - Universal</i>
Number of servers a client can connect to	1	Unlimited.
Number of camera views/client view	18	18
Support for megapixel cameras	•	•
Digital zooming	•	•
PTZ	•	•
Authorization <sup>11</sup>	•	•
No license required	•	•
Alarm list	•	•
View recorded video	-	•
Connect to cluster	-	-

<sup>9</sup> Ethisis Client and Ethisis Mobile are free of charge and exist only in one version. Availability of functions can depend on license level of Ethisis Server.

<sup>10</sup> The current hardware of the computer/network may limit the actual number of cameras that can be displayed. It is up to the integrator to ascertain that the offered hardware can handle the intended function.

<sup>11</sup> Availability of function depends on current license level of Ethisis Server.